




DOUBLE-WALL® AIR CYLINDER ROD SEAL, WIPER, AND BEARING REPAIR

Remove and inspect rod bearing. Replace if more than .008" larger than piston rod.

Pry out and discard worn out wiper and rod seal. Metal rimmed wiper is pressed or tapped into place with lips facing outward.

Lightly lubricate parts for reassembly.

*New bearings are supplied with wiper pre-assembled.

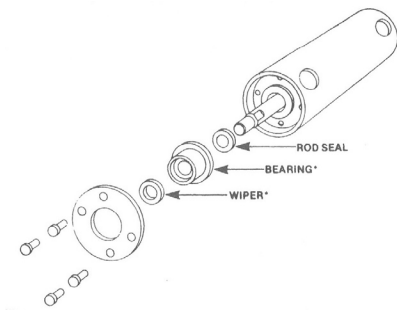

Bimba Manufacturing Company

Monee, IL 60449-0068

TEL: 708/534-8544 • FAX: 708/235-2014

Support: 1-800-44-BIMBA

Visit our website at: www.bimba.com

Form DWKA-809