



Technical Bulletins


PM-MC-09 Mounting Clamp Installation Instructions

Insert the dove tail or angular end of the clamp into one of the mounting channels that run along the length of the guide beam. Either the top or bottom channel can be used, depending on the installation orientation your application requires.


The clamp has a 0.28" (7.1mm) diameter through hole with a 0.42 x 0.31 DP (10.7mm x 7.9mm) counter bore. Insert your fastener through the hole and torque to 100 in-lbs (11.3 N-M).

Important installation notes:

- The side switch tracks are not engineered for installation of the actuator.
- Install the clamp so that the entire width of the dove tail or angular side of the clamp is engaged in the guide beam channel.

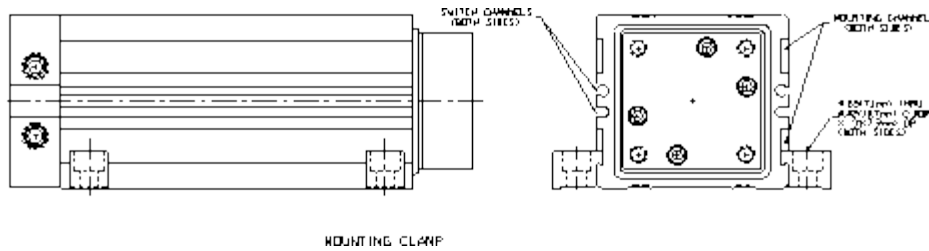

engaged in the guide beam channel.

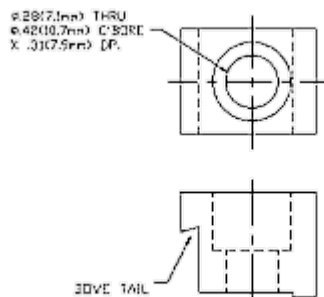

The information presented is in Bimba's best engineering opinion and should be used for reference only. Recommendations derived should be verified under actual operating conditions. Bimba reserves the right to change specifications without prior notice

Date: 12/4/08 Rev Level: 0